



Home Porch
& Patio Kits INC
homeporchandpatiokits.com

Porch Screening Kits For Existing Roof-lines

Installation Guidelines

BUILD DIFFICULTY: 3.0

This rating is for those who are not intimidated by the requirement to organize and understand the assembly of a fair number of different materials and profiles. If you come from a 'hobbyist' background then you already have a level of ingenuity which will be able to anticipate assembly challenges. Problem solving may be a requisite for this level of build; the kind of problem solving that comes from a decent amount of experience. Precise preparation work, fitting and understanding the importance of the old adage "measure twice, cut once." This type of job can take between 1- 3 days, including preparation and clean up, depending on the size of the project and your skill level. Planning for complications at this level is wise.

Thank you

...for trusting Home Porch & Patio Kits Inc with your purchase. Your porch screening materials are manufactured in the US of A and are backed by a limited lifetime warranty on all extruded aluminum parts.

1.844.404.0484

Copyright © 2016 - 2026 Home Porch & Patio Kits Inc. All rights reserved.

Porch Screening Kits

For existing roof-lines

Before You Begin

Your DIY Porch Screening Materials Kit comes with all materials, including hardware and brackets, “internal” to the kit. You will need to supply the hardware to secure vertical and horizontal attachment channels to your wood decking or cement pad. You probably have all the tools you will need to accomplish the installation. A list (not to be considered comprehensive) is given below. Anything else that you might need is purchased locally

Some of the tools you will need...

- ♦ 4 ft. Carpenter’s level
- ♦ Chalk line (to mark level installations)
- ♦ Metal file (to smooth cut edges)
- ♦ Cordless drill/nut driver
- ♦ Caulking gun
- ♦ Stud Finder
- ♦ Ladder
- ♦ Screwdrivers
- ♦ tape measure
- ♦ Chop saw with metal cutting blade
(*required to make accurate and precision cuts)
- ♦ Masonry bits for drilling into concrete
- ♦ Masonry fasteners (if necessary)
- ♦ Plumb Bob
- ♦ Safety eye-wear
- ♦ Box knife
- ♦ Hammer
- ♦ Gloves
- ♦ **1-2 Helpers!**

Porch Screening Kits

2" extruded aluminum screen enclosure systems come in white, clay, bronze and black. You will get 24' lengths of 2 x 2's, 1 x 2's, 1x2 U-channel. Everything internal to the installation is supplied including mullion clips, screws, foam tape, screening, spline, chair rail or kickplates and screen doors should you wish us to supply them.

If you find that the materials quoted for your application are not in your order...

Please call Home Porch & Patio Kits Inc. [first!](#)

Do not call the manufacturer

The manufacturer generally can not respond to customer issues and phone messages.


We have internal contacts for these types of issues, making sure you get what you paid for as quickly as possible.

1.844.404.0484



Porch Screening Kits

For existing roof-lines

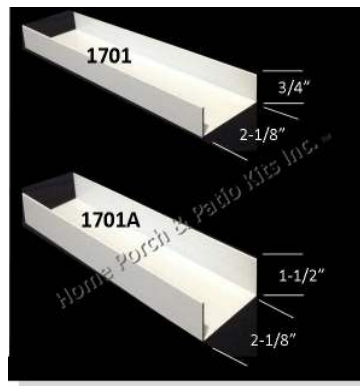

Get familiar with your project!
The extrusions don't have labels
on them so these pictures will
help you identify what you have...

Disclaimer: *Not all parts you receive may be exactly as shown / drawn in these guidelines. However all parts that you do receive will accomplish the assembly according to your quotation. These are to be considered as general installation instructions only. You may need to make adjustments necessary to your particular circumstances. Best practices according to your own DIY skill level should be used.*

1.844.404.0484

Porch Screening Kits


For existing roof-lines

STEP 1: In addition to these guidelines...


- Print a copy of the drawing that was given to you with your quotation
- Print a copy of your quotation which was the basis of your purchase. It may contain notations specific to your project.

BEFORE you begin cutting, organize your materials...

Depending on the size and complexity of your project you might have up to 5 different profiles each in 24' lengths. Separate them out each into their unique profile piles.

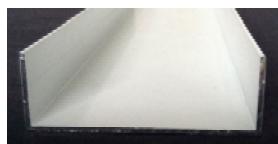


[1701]
3/4" x 2-1/8"
U channel

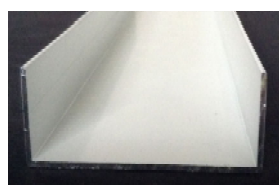


[1701A]
1-1/2" x 2-1/8"
U channel



[1707]
1" x 2"
Main-Frame

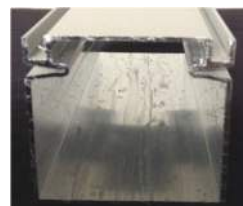


[1708]
2" x 2"
Main-Frame

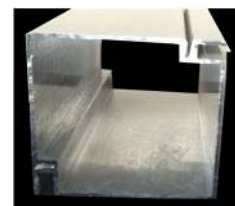

[1706]
2" x 2"
Corner Post

Most projects will have **1701** U channels, **1707** 1" x 2" main-frames and **1708** 2" x 2" main-frames. After separating them into their respective profiles you will need to know how you will be using the lengths of each profile to ensure you have enough to accomplish installation.

Using the example given below (*illustration only*) you would have received (5) x 24' lengths of **1701 U-channel**. (2) x 24' lengths would be used for all 7'2" vertical heights (6) on the house wall and posts. (1) x 24' length would be used on the top (under the existing roof) in Sections **A** & **B**. (1) x 24' length would be used on the floor in Sections **A** & **B**. The remaining 24' length would be used for the top and bottom installation in Section **C**.

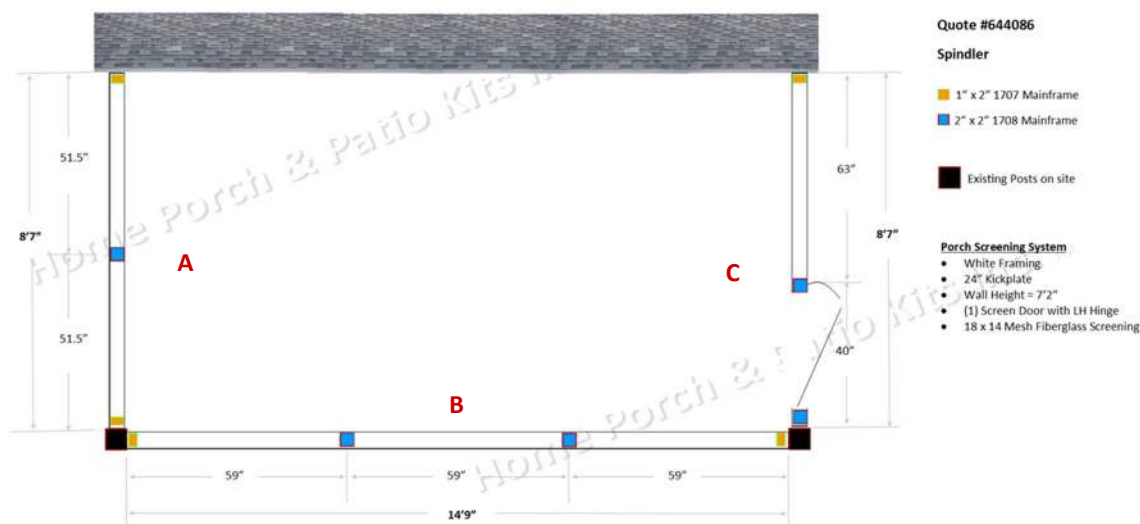

1.844.404.0484


Copyright © 2016 - 2026 Home Porch & Patio Kits Inc. All rights reserved.

Porch Screening Kits

For existing roof-lines

STEP 1: (cont'd)

Continuing with our **example**, you would have also received 5 x 24' lengths of **1707 1" x 2" main-frame**. The vertical installations of the 1707 are pictured in orange in your drawing. (1) x 24' length would be used for the two 7'2" verticals on Side A and the 7'2" vertical on the left hand post on Side B. (1) x 24' length would be used for the 7'2" vertical on the right hand post on Side B, the 7'2" vertical on the wall of Side C and the 8'7" floor section of Side C. (1) x 24' length would be applied on the floor in sections A and B. (1) x 24' length would be applied on the top (under the existing roof) in sections A and B. for The remaining 24' length would be applied on the top (under the existing roof) in sections C. *[Hint: This is why your drawing is color coded!]*

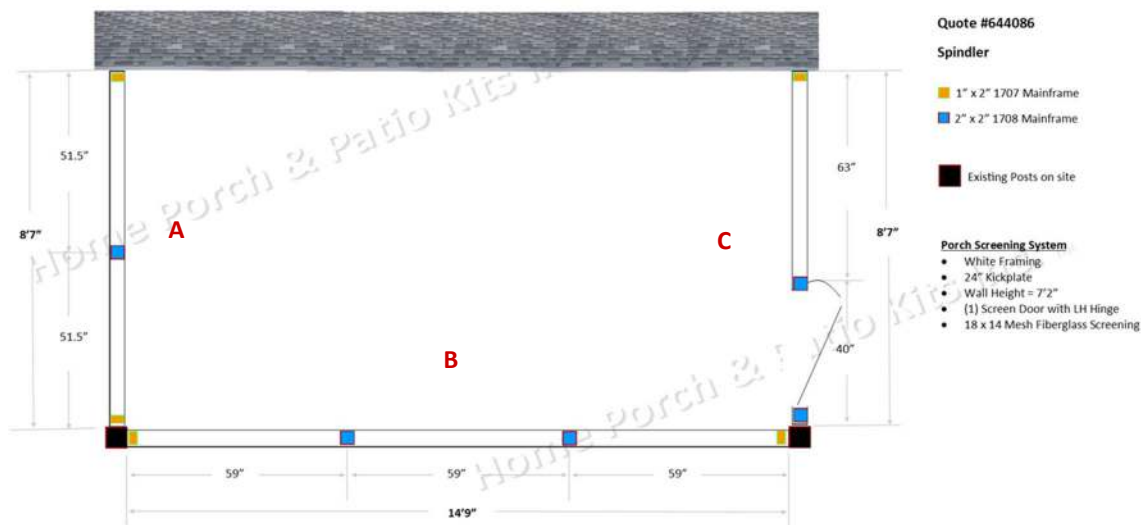

Finally, again with the same example, you would have received 3 x 24' lengths of **1708 2" x 2" main-frame**. The vertical installations of the 1708 are pictured in blue in your drawing. (1) x 24' length would be used for the verticals in Sections **A** & **B**. (1) x 24' length would be used for the verticals in section C as well as the horizontals on top of the kickplate in Section **C**. The remaining 24' length would be used as the horizontals on top of the kickplate in Sections **A** & **B**. *[Hint: If there was no kickplate, the same material would be used as the chair rail!]*

STEP 2: Cut & Install the 1701 3/4" x 2-1/8" U Channel

- You will need to cut a piece of U channel to attach to each of your vertical (walls and posts) and horizontal (floor/deck and underside of roof/ beam) surfaces.

****Mounting Hardware NOT included—see next page**

- We include an appropriate number of rolls of weather stripping to go on the backside of the vertical U channel installations onto house walls and existing posts. Though not 'necessary' it is an option to use on rough or uneven surfaces such as brick face or step siding.

1.844.404.0484

Porch Screening Kits

For existing roof-lines

STEP 2: (cont'd) Cut & Install the 1701 3/4" x 2-1/8" U Channel

To mount your bottom U channel we suggest using Red Head hammer set nails or Tapcon screws for securing to cement or brick surfaces. If mounting to wood surfaces, punch or drill a starter hole and use quality deck screws to secure the U channel.

***18" to 24" spacing is recommended**



[Hint: High quality acrylic latex caulking can be applied to the back of the U channel prior to securing in place for waterproofing purposes]



Your U channel installations are going to meet in all four corners of each of your existing openings. You may choose either to the above scenarios for your installation. The first picture runs the bottom (and top) U channel from wall to post or wall to wall. The second picture runs the vertical installation from floor to ceiling on your existing wall or post.

[Hint: You may miter a 45 degree connection for the corners however it would add to the 'error' potential built into making cuts in a limited material supply.]


1.844.404.0484



Porch Screening Kits

For existing roof-lines

STEP 3: Install the 1707 & 1708 Vertical Mainframes

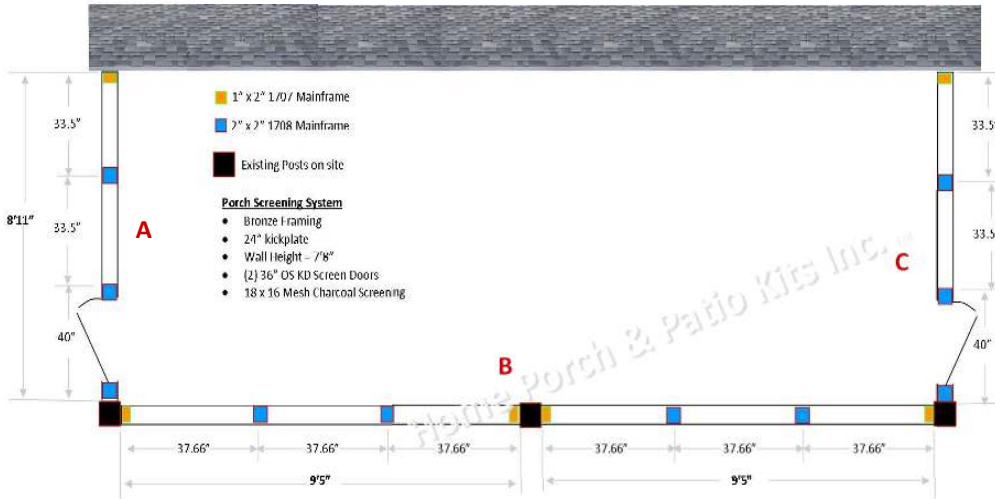


As we mentioned in Step 1 the drawing provided with your quotation indicates the orange markers as the 1707 1" x 2" vertical installations and the blue markers are the 1708 2" x 2" vertical installations. [*\[Hint: This is why your drawing is color coded!\]*](#)

Continuing with our example above you would start by installing the two (within Section **A**) vertical pieces on the wall & post, using the material indicated in your drawing. On the left side in the example above, this would be a piece of 1707 1" x 2" mainframe placed in the U channel going up the house wall and a piece of the 1708 2" x 2" mainframe placed in the U channel going up the existing post.

Using **your** quotation drawing, you will continue to install the remaining appropriate (within each section) 1" x 2" and 2" x 2" mainframe verticals within each section and if applicable up the remaining posts and / or walls.


[*\[Hint: We strongly suggest measuring the height of EACH vertical installation. Heights may vary with the slope of the roof line or the slope of the deck or patio. Nothing is ever perfectly square.\]*](#)

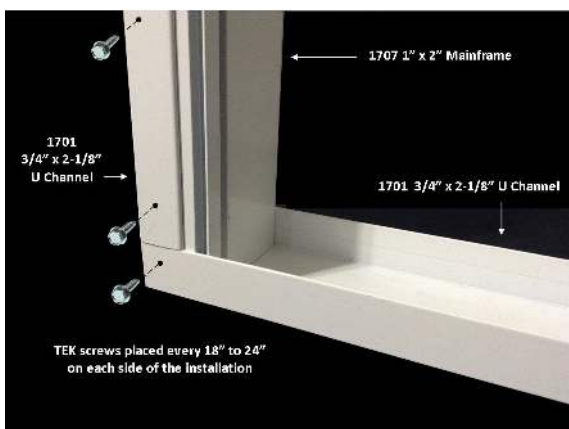

1.844.404.0484



STEP 3: (cont'd) Install the 1707 & 1708 Vertical Mainframes

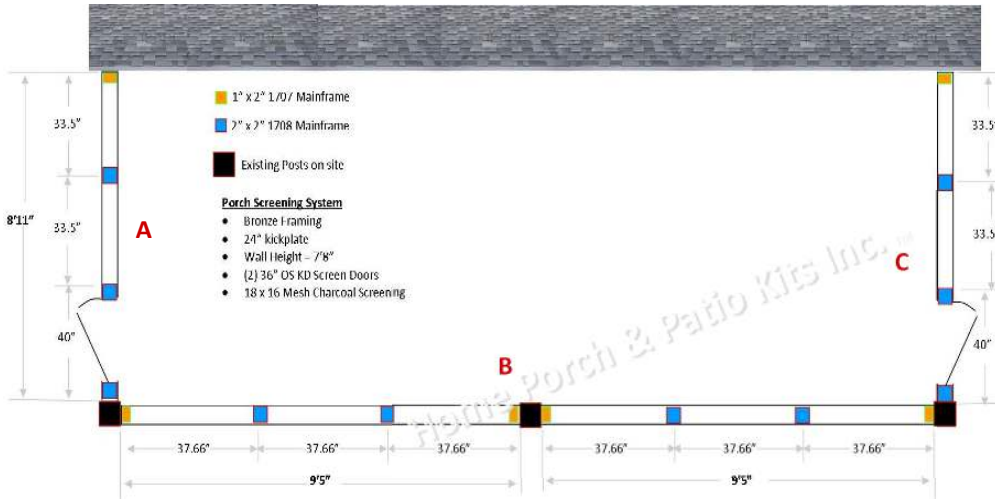

Again using **your** quotation drawing, install all remaining verticals, within each section. These will be the 2" x 2" 1708 mainframes, denoted by the blue markers. Use the spacing suggested in your drawing as a layout guideline. In the **example** above in the two front wall Sections (B), note that the spacing between verticals within each section, works out to about 37.66".

IMPORTANT: The spacing between verticals is flexible and can be adjusted on site... as long as you do not exceed the width of the screening provided, minus 1", in any of your adjusted spacing.

Your quotation drawing will have door placements indicated. As in the example above, they indicate a 40" spacing. That 40" **includes** both vertical framing members.

****See 'Notes on Door Installations' on page 9.**



[Hint: All spacing given in your drawing can change slightly during installation. Should you decide to change something significantly **MAKE SURE** to not exceed the width of the screening supplied with your order.

We suggest using (2) two self tapping hex head TEK screws at the bottom and top, **of each side**, of each vertical 2" x 2" installation

Porch Screening Kits

For existing roof-lines

****A note about Door Installations**

First, review the pre-assembled door installation guidelines!

(<https://www.homeporchandpatiokits.com/>)

Second, There is no U channel installation in the door section!

Third, you will note in the example we have been working with, and as it is in your drawing, that the doors are always 'framed' by our 1708 2" x 2" vertical mainframes.

INCLUDING the (2) two mainframes, the total width, outside edge to outside edge, of a 36" wide door assembly is 40".



If you purchased a 32" door then the total width of the door assembly including the (2) 2" x 2" vertical mainframes would be 36".

STEP 4: Install the 1707 (1" x 2") Horizontal Mainframes

Once you have all your vertical mainframes in place you will start with the horizontal mainframe installation. You will now be cutting lengths of the 1" x 2" mainframe to fit inside the U channel between each of the verticals.

If your corners are 90 degrees and your floor/ceiling is level, then the 1707 mainframe will sit right down in the bottom of the U channel. Alternatively you can shim/lift the mainframe in the U channel so as to level the installation and screw it in place.

Typically 3 screws through the lip of the 1701 U channel, on each side of the 1707 - 1" x 2" mainframe installation (18"-24" spacing) is enough to secure it in place in the U channel. You may need 1 or 2 more on each side depending on the length of your installation.



1.844.404.0484

Porch Screening Kits

For existing roof-lines

STEP 5: Install the Chair Rail *(Skip to Step 6 for kickplate)*

Important starting note: Whether you have a kickplate to install or simply a 'chair rail' both installations use the 1708 - 2"x2" mainframe material. Note that with a kickplate installation the mullion clips are installed on top of the chair rail. If there is no kickplate you can install the mullion clips on the underside of the chair rail.

Chair Rail: The chair rail can be installed at what ever height off the floor you desire. We suggest sitting in you favorite chair and choosing a height that does not interfere with your sight-lines into the backyard!

You will want to cut your length and then hold it in place, using a level to make sure it is square against both verticals. Using a pencil, draw a line under the mainframe piece on each of the verticals. You will use these lines as a reference to secure the chair rail in place.

You will find a way that is easiest for you, but to start, we suggest taking your piece of chair rail and securing the mullion clip to each outer edge as shown to the right. Be sure that when you turn it over to put it in place the two spline grooves on the outer face are toward the outside!

[Hint: *The mullion clips are generally supplied 'unpainted' and not predrilled. Hit them with a shot of the touch up paint we have supplied with your order. If you wish you can drill starter holes in the mullion clips but the TEK screws are self tapping and easy start without any starter holes.)*

You can now finish off the chair rail installation by using the pencil line on each of your verticals to make sure you keep everything level as you secure the mullion clip to the vertical mainframe.



1.844.404.0484

Porch Screening Kits


For existing roof-lines

STEP 6: Install the Kickplate *(Skip if you have a Chair Rail installation—See Step 5)*

Important starting note: Whether you have a kickplate to install or simply a 'chair rail' both installations use the 1708 - 2"x2" mainframe material. Additionally, in both cases the mullion clips are used on the underside of the mainframe to secure it in place.

Measuring: In order to cut the right size of kickplate for your opening you will need to consider the width of your opening as well as the depth of the channels that holds the kickplate in each of the verticals. For example... if your opening is 42" between inside faces of your verticals you will want to cut your kickplate section between 42.5" to 42.75" to ensure a 'snug' fit. Do not cut it too big otherwise your kickplate will bow.

All you will need to cut your section of kickplate off the coil is a level and a box knife. Use the box knife to score the kickplate and then snap your piece off the roll.

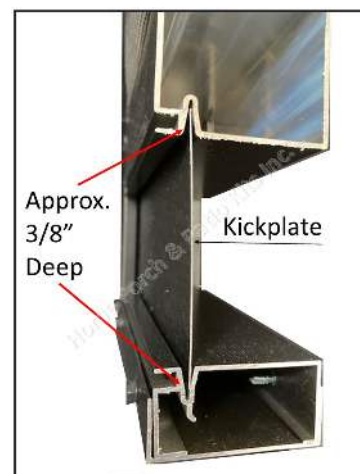

Installation: Since your piece of kickplate is slightly oversized, simply put the kickplate in the groove on the left vertical and bow or bend the kickplate slightly so that you can release it into the groove on the right vertical. Then simply slide it down into the groove on the bottom mainframe you have already screwed into place.

You will now want to cut your length of 1708 - 2"x2" mainframe to go on top of your kickplate assembly. Place it on top of the kickplate and use a level to make sure it is square against both verticals. Using a pencil, draw a line under (or on top) the mainframe piece on each of the verticals. You will use these lines as a reference to finally secure the top piece.



You will find a way that is easiest for you, but to start, we suggest taking your piece of 1708 mainframe and secure the mullion clip to each outer edge as shown to the right. Be sure that the two spline grooves on the outer face of the 2"x2" mainframe are toward the outside! Remember your mullion clips are installed on the top of the 2"x2" mainframe.




1.844.404.0484

Porch Screening Kits

For existing roof-lines

STEP 6: cont'd **Install the Kickplate** *(Skip if you have a Chair Rail installation—See Step 5)*

You can now finish off the kickplate installation by using the pencil line on each of your verticals to make sure you keep everything level as you secure

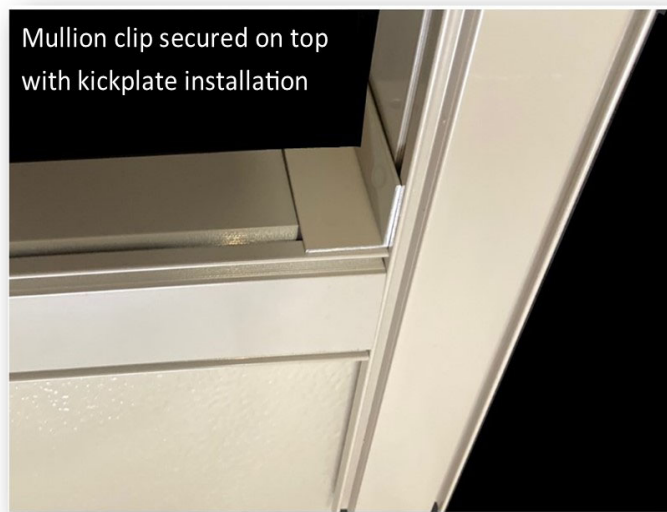

[Hint: The mullion clips are generally supplied 'unpainted' and not predrilled. Hit them with a shot of the touch up paint we have supplied with your order. If you wish you can drill starter holes in the mullion clips but the TEK screws are self tapping and easy start without any starter holes.]

STEP 7: **Install the Door Header**

We have supplied enough 1708 - 2"x2" mainframe to put a header up on your door section. This should be installed exactly 80" from the ground.

[Hint: Since no installation is perfectly square, you may want to consider reviewing the pre-assembled door installation guidelines!]

(https://www.homeporchandpatiokits.com/pdfs/Install_SingleScreenDoor.pdf.)

*Then hold it in place to make sure the bottom sweep operates properly across the full width of the installation. With a pencil mark the spot on the vertical framing where the **bottom** of the header should sit. It should be very close to 80".*

Secure the header using the mullion clips supplied except the mullion clips are secured on top of the header so as not to interfere with the door frame assembly as it attaches to the 2"x2" verticals



1.844.404.0484


Porch Screening Kits

For existing roof-lines

ADDENDUM #1

Horizontal Chair Rail, Top Of Kickplate and Door Header Connections

Some customers may not receive the mullion clips described above. Depending on availability, you will receive our "F - Clips". It is a simple two flange clip where the two flanges fit snugly into each end of the 1708 2" x 2" horizontal mainframe (as depicted on the right). Don't be afraid to use a rubber mallet to get the F-Clip fully into the opening.

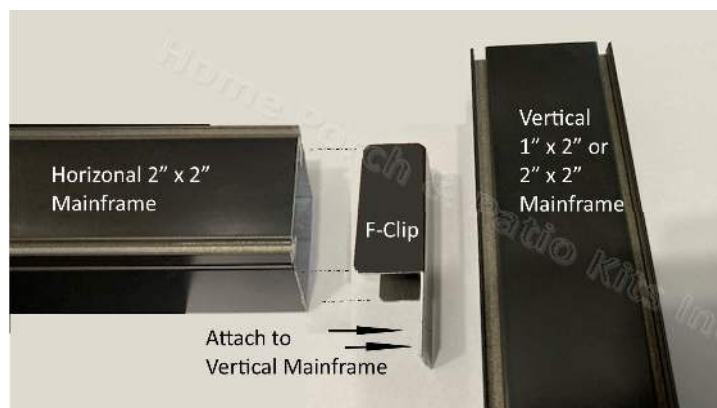

Be sure to have the 'tail' pointing toward the floor for attachment to the vertical mainframes with the self tapping 1/2" TEK screws supplied. Additionally with the tail pointing toward the floor, be sure the ALL spline grooves are facing toward the outside!

ADDENDUM #2

*Hard Top Screen Room | Bottom Bracket Work-Around

Most people prefer to have the bottom post brackets placed so they run the same direction as the front wall. The bottom U channel can be run up to the horizontal and vertical flanges of the bracket and simply continue the 1" x 2" mainframe over top of each of the flanges meeting at the bottom corner. *Pictured on the right >>>>>>*



Alternatively you may choose to trim the bottom off the U Channels, the length of the bracket flange, so that the sides of the U Channel runs all the way to the corner.

<<<<<<<< Pictured on the left

1.844.404.0484

Porch Screening Kits

For existing roof-lines

STEP 8: Installation Considerations

Slopes: Often cement pads will slope 'away' from the house wall by as much as 2". You will need to make a decision as you begin to install your bottom horizontal 1707 - 1"x2" mainframes between your verticals.

1. Either follow your natural slope along the bottom installation and with your chair rail / kickplate installation.

OR

2. You can start to 'float your bottom horizontal 1707 - 1"x2" mainframes between your verticals by lifting them slightly to 'level' as you move away from the house wall to the front of your installation.

Hint: The advantage of #2 is if you want the 1708 - 2"x2" chair rail or top of the kickplate to be level, you will not have to trim the kickplate in each section to accomplish it.



Corners: Most applications will be using existing posts to 'turn the corner' from the front wall to the sidewalls. For the times where you are screening outside the support structure we have the 1706 - 2"x2" corner post to screen around the corner. WARNING - it can be installed upside-down! The pictures below shows you the correct and incorrect installation of the corner post.



Accessories: Everything 'internal' to your installation is supplied by Home Porch & Patio Kits. All hardware to attach the U channels to your house wall, cement pad, deck, posts & under the roof line is supplied by you the customer and should be sourced locally.

1.844.404.0484

Porch Screening Kits

For existing roof-lines

STEP 9: Screening Your Installation

Unless you have requested otherwise, we have supplied you with screening to finish off your installation. Typically it will be a 100' roll at a width based on your largest opening. We have also supplied a roll of spline and a screen roller tool to roll the spline into the 'spline groove' locking your screening in place.

Unless you have a kickplate, you will be screening both above and below the 1708 - 2"x2" mainframe horizontal. Obviously with a kickplate you will only be screening above the horizontal 2"x2" mainframe.

Start by cutting the length of screening you need for you first section, making it about two inches longer than the total height. You will also need 4 pieces of spline - two about 4" longer and two about 4" wider than your opening.

Temporarily tape (not supplied) the four corners of your section of screen in place. Take hold of 'the center' of the length of spline and roll about 12" of the screen and spline into the first spline groove on both sides of the opening. This will be where the most tension on the screen will be and where you set the horizontal level of the mesh in your opening.


Once you have both sides started you can have someone apply a light inward pressure with their hand on the screen as your roll the spline in, going up and down in 12" increments on alternating sides. You can also try dragging the tip of your fore finger on the screening out in front of your spline as you roll to prevent the spline from pulling the material too tight. Effectively, you are screening from side to side first, pulling the screen taught but not overly so. Then finish off the section by rolling the spline and screen into the horizontal spline grooves. You will use 4 pieces of spline per section rather than one continuous piece of spline. Trim off excess screening & spline by running a sharp blade (razor or box knife) along the back edge of the spline.

As with other parts of this project, after working through your first section (*Hint: Start with a small lower section, if possible, for practice*), you will likely develop your own method for screening in your installation.

It will take practice!

There are a few screening resources on our YouTube page for your review...

(<https://www.youtube.com/channel/UCcrSkeavhUdgj9GgSds1xsQ>)

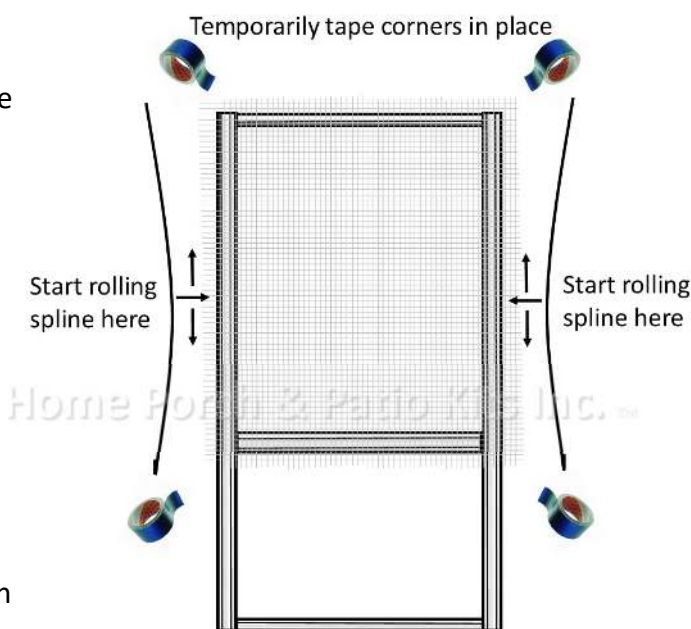

Porch Screening Kits


For existing roof-lines

Installation Guidelines

Take your time, measure twice, cut once and above all...

Enjoy the process!

Don't forget to send pictures bragging about your DIY skills!

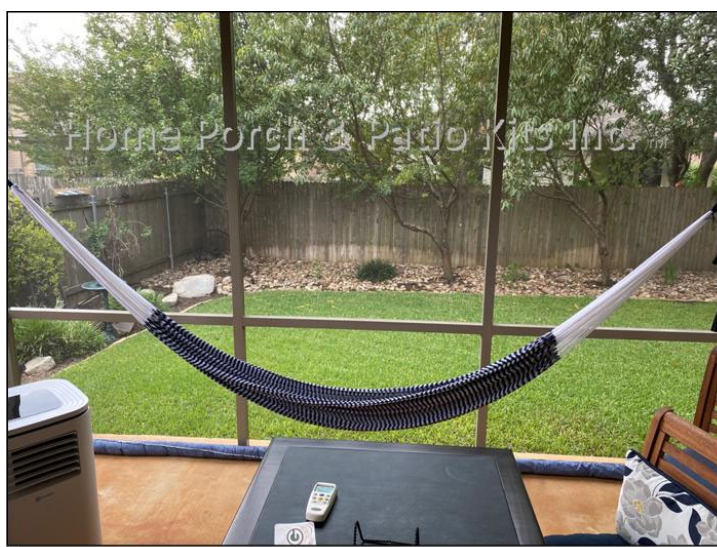

Finally: These pages are intended as a 'guide' only. It is assumed you have entered into this process with an appropriate level of DIY skills and are capable of problem solving along the way. The beauty of this 'materials supplied' kit is its built in adaptability. These guidelines are not given to address every situation you may run into within your particular application.

You will need to know how you will be using the lengths of each profile, prior to cutting, to ensure you have enough to accomplish installation. If you believe there is a problem with the amount of material you have, give Home Porch & Patio Kits a call, toll free, and we will go over it with you! Obviously, if wrong cuts lead to a material shortage, you will need to purchase additional material.

We will always work to get the material to you in the cheapest and fastest manner possible.

1.844.404.0484

Copyright © 2016 - 2026 Home Porch & Patio Kits Inc. All rights reserved.